


ggmgastro

Operation Instruction

for Luxury Digital Display

Soup Kettle SWH9SD SWH9ED

Specification: Capacity : 9L
Voltage : 220V-240V AC 400W
Weight : 4.5Kgs
Dimension : 395mm High 340mm Dia
Temperature : 0-95°C
Temperature display:0.4 inch led nixie tube

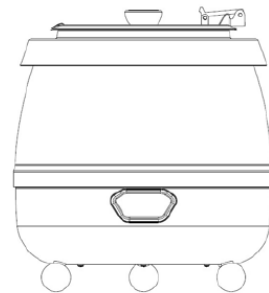


Operating and Notes:

- * When using the machine, please add 0.6L of water into Aluminum container(between the stainless steel kettle and Aluminum container. The water can not be overfilled . Even if the stainless steel kettle is empty, it still can not float up. And must pour out excess water immediately.
- * The plug should be connected with the right plug seat.
- * When you want to move the machine which is not in used, please put stainless steel cover at the right place.
- * When the soup kettle is working or there is hot food in it, please do not move it.
- * Spilled food should be removed immediately from all exterior surfaces. The stainless steel kettle and cover are all washable. The surface and ring lid should be cleaned by wet soapy cloth.
- * Press "POWER"button, "temperature setting" will be displayed. And machine starts to work.
- * Press"SET" button, "temperature setting" will be displayed twinklingly. The temperature value can be added by pressing"POWER"button。 The temperature value can be reduced by pressing"SET"button. It will return the main menu if you do not push any buttons in 6 seconds.
- * When the machine is working, pressing "POWER"button,"--" will be displayed, then the machine will stop working.
- * Before cleaning machine,please ensure the power is cut off.
- * Machine can not be swashed frequently.



ATTENTION: Never immerse machine into water, because it will cause a damage to the heating element. And the guarantee card is invalid.

This machine must be earth connected. Do not operate empty machine.

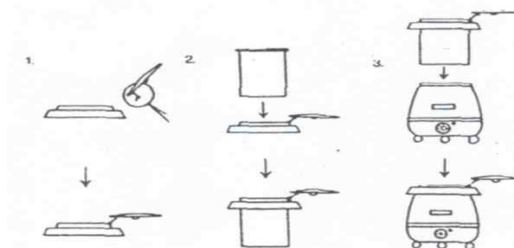



GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgaastro.com info@ggmgaastro.com
+49 2553 7220 0